



DURAFLAP INSTALL DIRECTIONS FOR FORD RAPTOR 2021-Current FRONT Drill-less MUDDLAPS

Included supplies: 6- #8 x 1 1/4 Stainless Steel Black Oxide (SSBO) screws; 6- #10 (SSBO) washers
Thread locker is recommended on all the screws.


Step 1: Remove factory screws at points A,B, and C.

Step 2: Align the holes in the flap with the factory holes in the fender well. The grooved side of the flap faces the tire. Secure the flap with the screws and washers that are included in the bolt pack. Leave slightly loose.

Step 3: Ensure the flap is plumb to the outside of the tire and tighten all the screws.

Note: Recheck bolts every three months and tighten as necessary.

IF YOU HAVE ANY QUESTIONS OR CONCERNS PLEASE GIVE US A CALL AT 541-245-9148

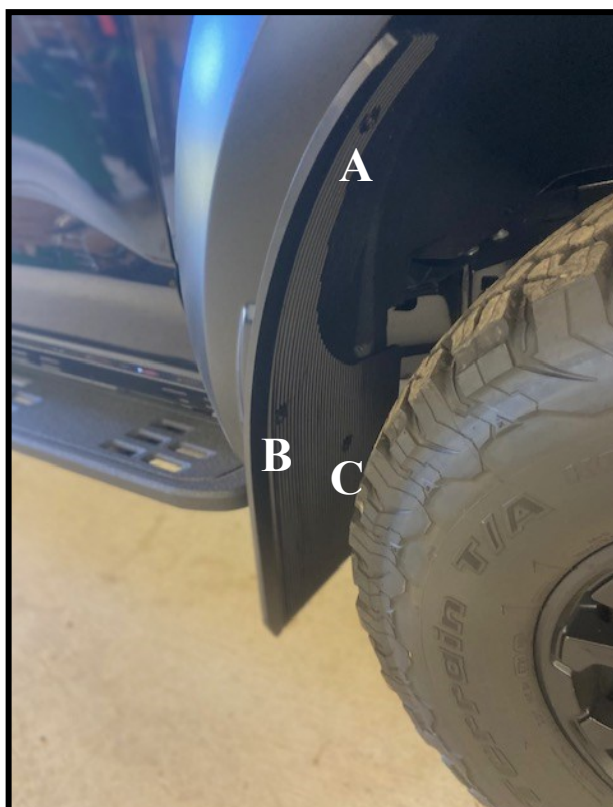

FF12 21 Raptor, FF14 21 Raptor